

Setting & Un-setting Your Risco Alarm System

How to do a full set (*when leaving your property*)

1.




Press the lock  button

The Key Pad Will display **SECURITY SYSTEM.**

2.



Press the lock button  again

The Key Pad Will display **INSERT CODE.**

3.



Present the prox tag to the Key Pad.
(*Around Number 6*)

4.



The Key Pad will display
Partition 1 In Exit Mode.

NOW EXIT YOUR PROPERTY

Setting & Unsetting Your Risco Alarm System

How to do a Un-set (*when coming in to your property*)

1.



Press the Unlock button twice



The Key Pad Will display **INSERT CODE.**

2.



Present the prox tag to the Key Pad.
(*Around Number 6*)

3.



The Key Pad will display
Partition 1 UNSET.

YOUR SYSTEM IS NOW UNSET